

techfass

WREM 82 MTM(VR)
RFID reader 13,56 MHz, 125 kHz

Introduction

RFID reader WREM 82 MTM(VR) with wiegand output, reads media at 125 kHz (EM Marin) & 13.56 MHz, (MIFARE®, NFC) and is designed for connection to control modules and door controllers of the APS mini Plus or APS 400 system, or to third party controllers. The reader is equipped with a configurable WIEGAND data output usable with most third party systems. The reader is delivered in MTMRFID module dedicated for entry panel MTM. It contains two inputs (LED and buzzer control), as well as an RS 485 interface for configuring the Wiegand output or fw update. In addition to standard MIFARE® and MIFARE® DESFire® RFID cards or key fobs, the reader is compatible with NFC-enabled mobile phones with Android 4.4 Kit Kat (or higher) and the TECH FASS Mobile ID application, with which the mobile phone can be used for identification (replaces usual RFID card).



a. Application

- Access control system, booking system
- Door access control, both-sided access control
- Lift access control

b. Parameters

- Input voltage 8 ÷ 28 Vdc
- Typical current consumption 53 mA @ 12 V
- Maximum input power 1,1 W
- Reading ID media MIFARE®, NFC, EM Marin, Jablotron
- 1x RS 485 (update firmware, wiegand output format settings)
- 1x Wiegand output (length 24 – 56 bits, MSB / LSB, reverse option)
- 2x Input (LED, buzzer control)
- Integrated in module MTMRFID (entry panel MTM)
- VR – antivandal option, black zamak alloy

c. Variants

Product variants in aluminium, silver color

CATALOG NUMBER	PART NUMBER	SYSTEM	VARIANT	RFID frequency
51482004	WREM 82 MTM - MF	APS mini Plus	Modul MTMRFID	13,56 MHz
514821C1	WREM 82 MTM - EM	APS mini Plus	Modul MTMRFID	125 kHz
51482093	WREM 82 MTM	APS mini Plus	Modul MTMRFID	125 kHz, 13,56 MHz

* In addition to WREM 82 MTM-EM, WREM 81 MTM-EM can be used.

Product variants in zamak, black color

CATALOG NUMBER	PART NUMBER	SYSTEM	VARIANT	RFID frequency
51482014	WREM 82 MTMVR - MF	APS mini Plus	Modul MTMRFID	13,56 MHz
514821D1	WREM 82 MTMVR - EM	APS mini Plus	Modul MTMRFID	125 kHz
514820A3	WREM 82 MTMVR	APS mini Plus	Modul MTMRFID	125 kHz, 13,56 MHz

* In addition to WREM 82 MTMVR-EM, WREM 81 MTMVR-EM can be used.

d. Marking

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
W	R	E	M	8	2		M	T	M	-	M	F											

System
M: APS mini Plus
N: APS 400
W: wiegand reader

Product type
REM: Reader module / reader


HW type
MTM

housing type
MTM: Aluminum
MTMVR: Zamak


RFID technology
MF: 13.56 MHz
EM: 125 kHz
Nothing: 13.56 MHz & 125 kHz

e. Block diagram


The WREM 82 MTM(VR) reader is a module for a modular MTM entry panel. MTM entry panel itself is part of the home intercom system, it has its own power supply and bus for receivers. WREM 82 MTM(VR) has its own cabling, configuration bus and wiegand interface for door controller or APS mini Plus or APS 400 reader module or third party wiegand controller. Plus.

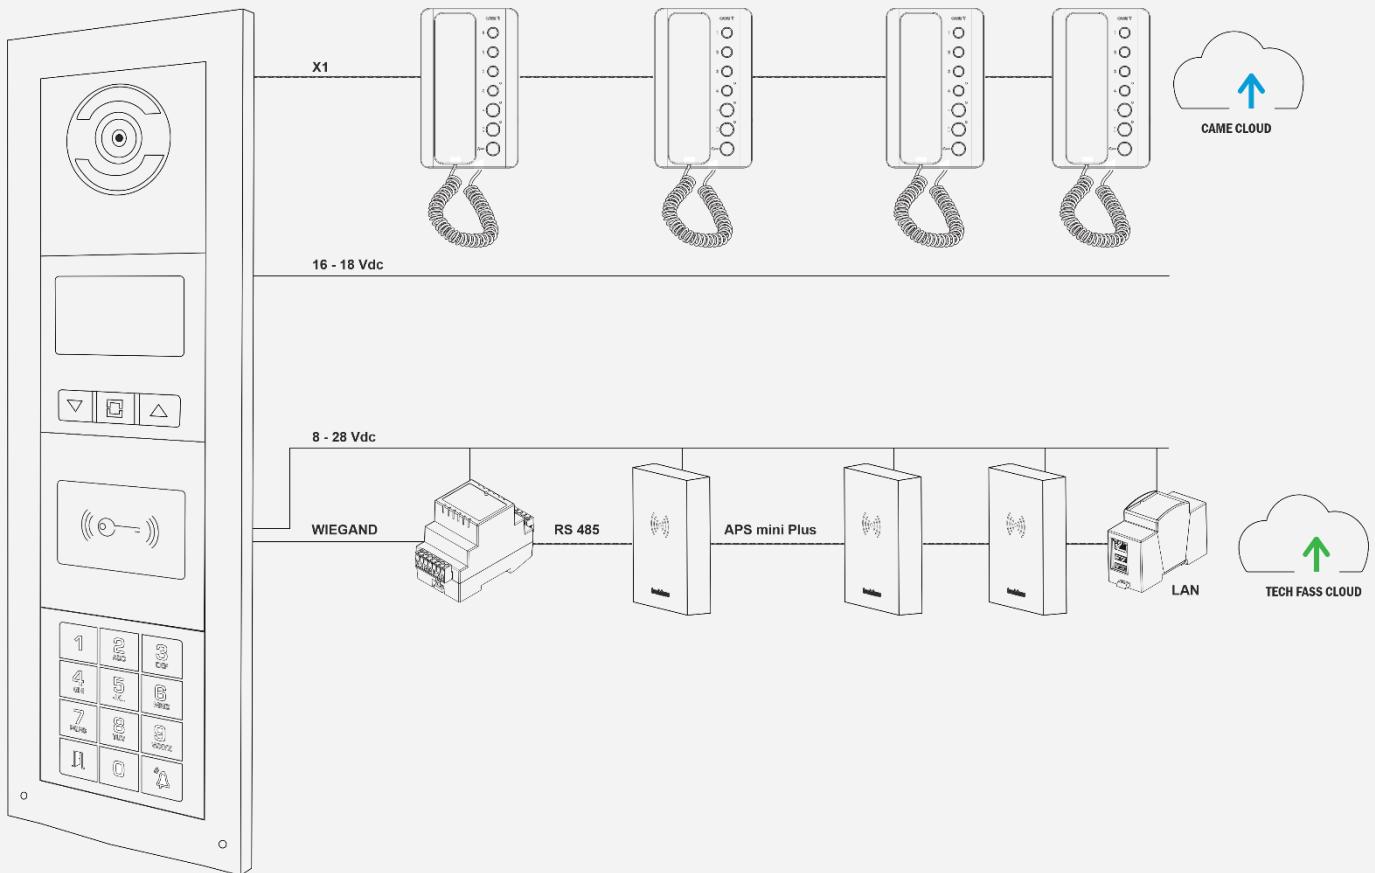

- The reader sends a code representing the ID medium via the wiegand interface to the MWGD 82 door controller.

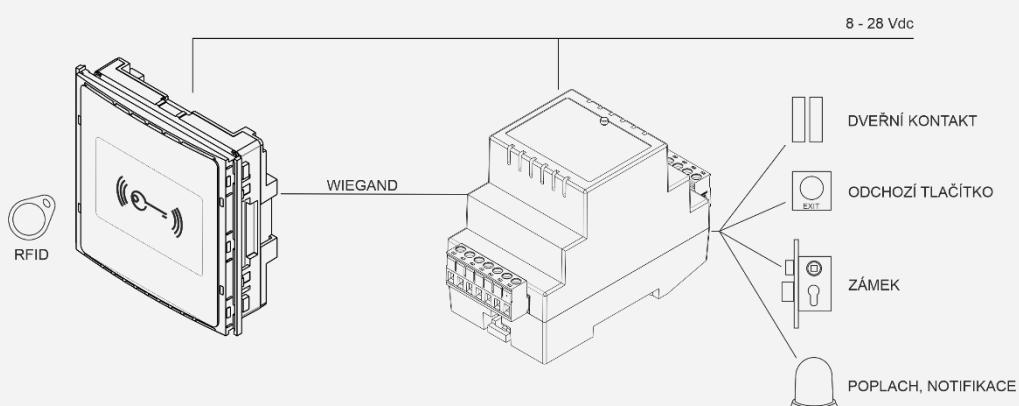

- The reader can be configured via the RS 485 bus using the APSUSB converter and the program APS Reader.

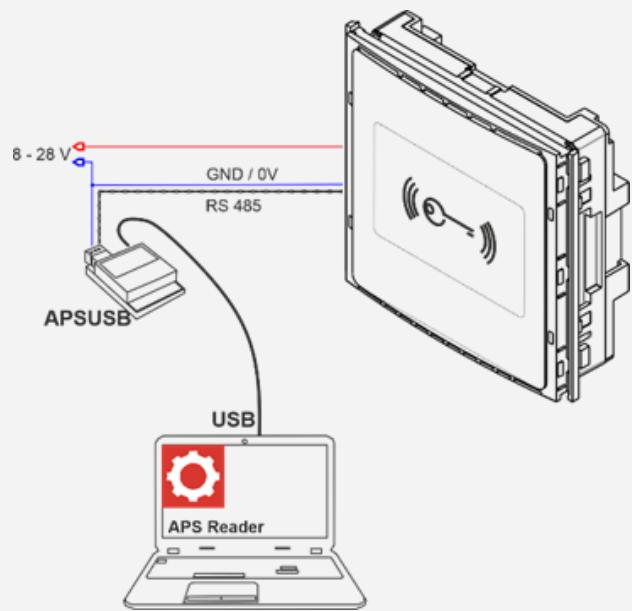

Content

1	Technical parameters.....	6
1.1	Electrical parameters.....	6
1.2	Communication interface.....	6
1.3	Mechanical parameters	6
2	Assembly.....	7
2.1	Cable connection of WREM 82 MTM(VR)	7
2.2	Installation instructions	8
3	RFID reading	9
3.1	Reading at 13,56 MHz.....	9
3.2	Reading at 125 kHz	10
3.3	Dual reading at 13,56 MHz &125 kHz	10
3.4	Wiegand output configuration.....	10
4	Wiring diagram	11
4.1	Connection possibilities WREM 82 MTM(VR)	11
5	Settings	13
5.1	Setup procedure	13
5.2	Indicative parts RGB LED and buzzer	13
5.3	Configurable parameters	13
6	Other	15
6.1	Legislation	15
6.2	Declaration of conformity	15
6.3	Electrical waste.....	15



1 Technical parameters

1.1 Electrical parameters

PARAMETER	CONDITION	MIN	MAX	UNIT
Input voltage Vin		8	28	V
Typical current consumption Iin	Vin = 8 V Vin = 12 V Vin = 24 V		75 53 30	mA mA mA
Peak current consumption Iin	Vin = 8 V Vin = 12 V Vin = 24 V		106 73 42	mA mA mA
Typical input power			0,7	W
Maximum input power			1,1	W
Typical reading distance (ISO card)	125 kHz (EM Marin)	3	5	cm
	13,56 MHz (MIFARE® Classic®)	3	5	cm
Radiated H-field intensity @ 10 m	125 kHz		-11	dBuA/m
	13,56 MHz		-8	dBuA/m
Signalization	RGB led Piezo		1 1	pc

1.2 Communication interface

INTERFACE DESCRIPTION	TECHNOLOGY	PROPERTIES
Service data bus	RS 485	19 200 bit / s, 8 datových bitů, sudá parita, 1 stop bit
Wiegand output	Wiegand	Formats 26, 32, 42, 44, 56 bits

1.3 Mechanical parameters

PARAMETER	WREM 82 MTM	WREM 82 MTMVR	JEDNOTKA
Weight	122		g
Dimensions l x w x h	137,5 x 136 x 64 (34)		mm
Mounting	Wall-mounted or recessed		
Color & design	Silver, aluminium	Black, zamak	
Environment class	IV – outdoor general device, -25 ÷ +70		°C
IP code	IP 54		
IK code	IK 07	IK 09	
cable	12 wires, 2 x 0,4		m

2 Assembly

2.1 Cable connection of WREM 82 MTM(VR)


Cable of WREM 82 MTM(VR) contains 12 wires with following functions:

WREM 82 MTM(VR)

NUMBER	COLOR	DESCRIPTION	WHERE TO CONNECT (example)
1	Pink	Do not connect	
2	Purple	Do not connect	
3	Blue	GND power	GND
4	Blue	GND power	Power supply GND
5	Red	Power Vin 8 ÷ 28 Vdc	Power supply +Vout dc
6	Brown-green	Wiegand data 1	Wiegand input MWGD 82
7	White-green	Wiegand data 0	Wiegand input MWGD 82
8	Gray	Input 2 (IN 2), LED control	MWGD 82
9	Yellow	Input 1 (IN 1), buzzer control	MWGD 82
10	Brown	Signal ground 0 V	GND for inputs and RS 485
11	White	Signal B service bus, fw update	APSUSB*
12	Black	Signal A service bus, fw update	APSUSB*

*Configuration, firmware update.

** LED a Buzzer is possible to control by the same signal.

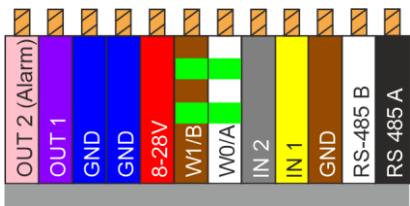

2.1.1 Inputs

INPUTS	DESCRIPTION
Input 1 (IN 1)	Buzzer control
Input 2 (IN 2)	LED control

2.2 Installation instructions

2.2.1 Reader installation

The WREM 82 MTM(VR) reader is already delivered in the MTMRFID module. It contains short 0,4 m long wires. Check for any voltage drop on the supply wires so that it is not below Vin min. Use a separate pair of UTP cable (if used) for each Wiegand signal, do not connect the W0 and W1 signals together in one twisted pair. Follow the MTM entry panel manual regarding the assembly.

2.2.2 RS 485 bus

It is recommended to bring a twisted pair for the RS 485 interface into the switchboard, to be able to update firmware or to configure WREM 82 MTM(VR). On the contrary to wiegand interface, this bus must be connected in one twisted pair. The actual configuration is performed using eg the APSUSB converter and the APS Reader program.

2.2.3 Radio signal interferences

If a product variant should read 125 kHz, it is necessary to take into account another 125 kHz reader in direct range - for example by both-sided door control. In this case, the readers may interfere with each other. In the techfass system, it is possible to use the so-called synchronization of reading between the reader and the reading module, which then do not interfere with each other.


In general, if possible, avoid mounting on metal substrates, it is recommended to perform a practical reading test or contact support@techfass.cz.

Interference along the line, eg from an interfering power supply, can affect the reading distance or the reader's own communication.

3 RFID reading

3.1 Reading at 13,56 MHz

The device can read media (cards, key fobs, stickers) according to ISO / IEC 14443A at the level of reading the so-called UID. Examples of media technologies used are NFC and the MIFARE® product family. The device is also ready for so-called sector reading, but it is not active yet.

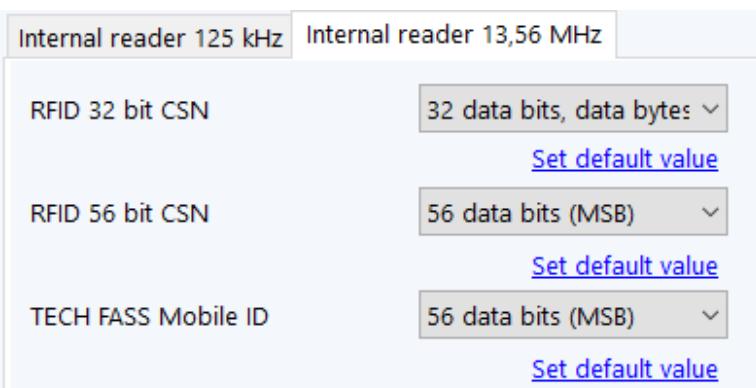

Print screen from APS Reader application.

32 bit CSN	56 bit CSN	TF Mobile ID
Disabled	Disabled	Disabled
32 data bits (MSB)	32 data bits (MSB)	32 data bits (MSB)
32 data bits, reversed (LSB)	32 data bits, reversed (LSB)	32 data bits, reversed (LSB)
24 data bits (MSB)	24 data bits (MSB)	24 data bits (MSB)
Facility code 0x01 + 16 data bits (MSB)	Facility code 0x01 + 16 data bits (MSB)	Facility code 0x01 + 16 data bits (MSB)
	56 data bits (MSB)	56 data bits (MSB)
	56 data bits, reversed (LSB)	56 data bits, reversed (LSB)


For the frequency 13,56 MHz, the format and length options of the so-called "card serial number" can be set according to the table above. Similarly for the TF Mobile ID mobile application.

3.1.1 Identification by mobile phone with OS Android 4.4+

Mobile phones equipped with NFC technology, OS Android 4.4 Kit Kat (or higher) can be used for identification (replaces the usual RFID card). You have to download TF Mobile ID application and follow its manual. The TF Mobile ID application is available for free download on Google Play.



MIFARE® a MIFARE Classic® jsou registrované obchodní značky NXP B.V.
Android® je registrovaná obchodní značka Google LLC.

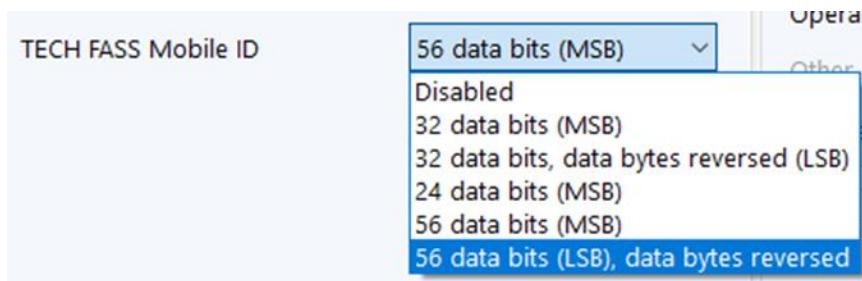

The TF Mobile ID read format and length setting options are shown in the image above (print screen from APS Reader).

3.2 Reading at 125 kHz

The EM or dual variant of the device can also read media with a frequency of 125 kHz like EM Marin (e.g. EM4200, EM4305). Next example of supported media technology is Jablotron ID.

125 kHz settings possibilities:

Internal reader 125 kHz Internal reader 13,56 MHz

EM and TF cards enabled
ID length [b] 24 32 40 44 56 64
[Advanced setting...](#)

Jablotron cards enabled

Default settings for 125 kHz.

3.3 Dual reading at 13,56 MHz & 125 kHz

The dual variant of the device allows reading media according to 3.1 and 3.2 at the same time.

3.4 Wiegand output configuration

Wiegand output setting

Data length [bit] 26 32 42 44 56
 Send reading synchronization commands to the controller


4 Wiring diagram

4.1 Connection possibilities WREM 82 MTM(VR)

Reader module can be connected as follows:


- **FIGURE A:** Configuration and firmware update.

To configure the reader or update the firmware, it must connect to the converter, eg APSUSB or APSSLAN and use the desktop application APS Reader.

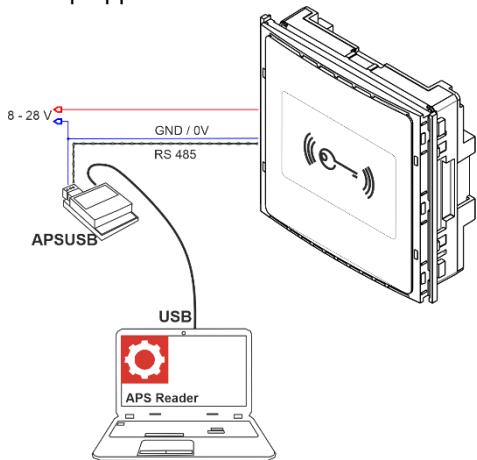


- **FIGURE B:** Connection WREM 82 MTM(VR) to the wiegand door controller

The Wiegand output of the reader is connected to the Wiegand input of the door controller, eg MWGD 82 or MWGD 46. Do not pull the wiegand interface W0, W1 in one twisted pair of UTP cable, use two, one pair for each signal. The power supply is in range of 8 -28 Vdc, please use the signal wires for LED and buzzer control if needed. These can be connected and controlled by only one wire from MWGD 82.

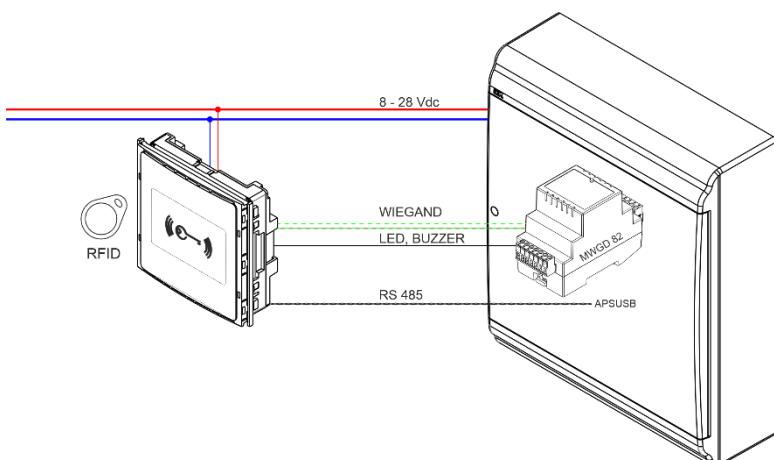


- **FIGURE C:** As part of a multi-module MTM entry panel, simply connect the 4 wires of the reader module.

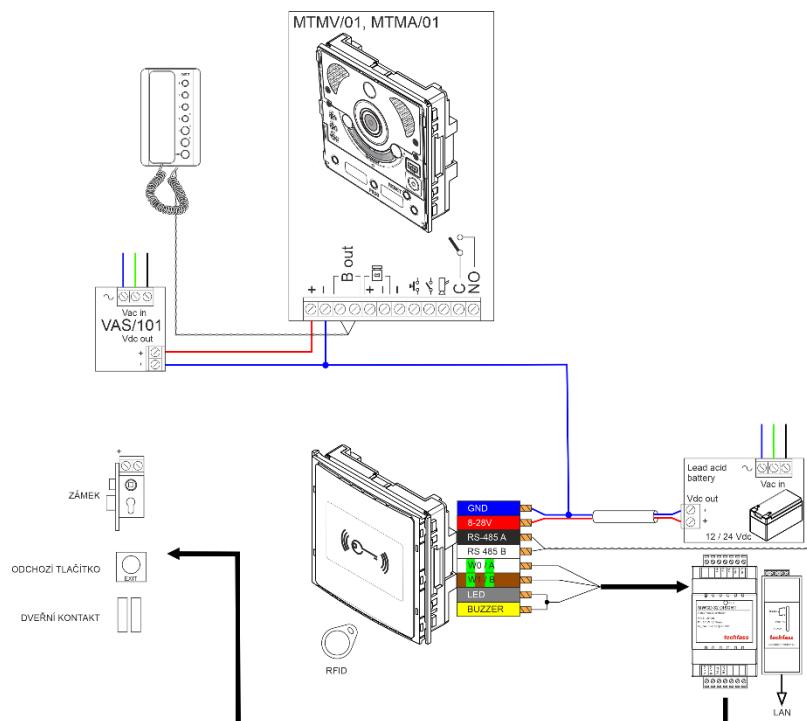

When connecting the WREM 82 MTM(VR) to the MTM entry panel, you can use your own access control system power supply. Connect the wiegand interface & power supply (minimum), and if possible, the signal for LED and buzzer control and bring the RS 485 wires to an accessible place for possible update fw or configuration.

- **FIGURE D:** Detailed wiring of WREM 82 MTM(VR) and MWGD 82 DISGRT door controller.

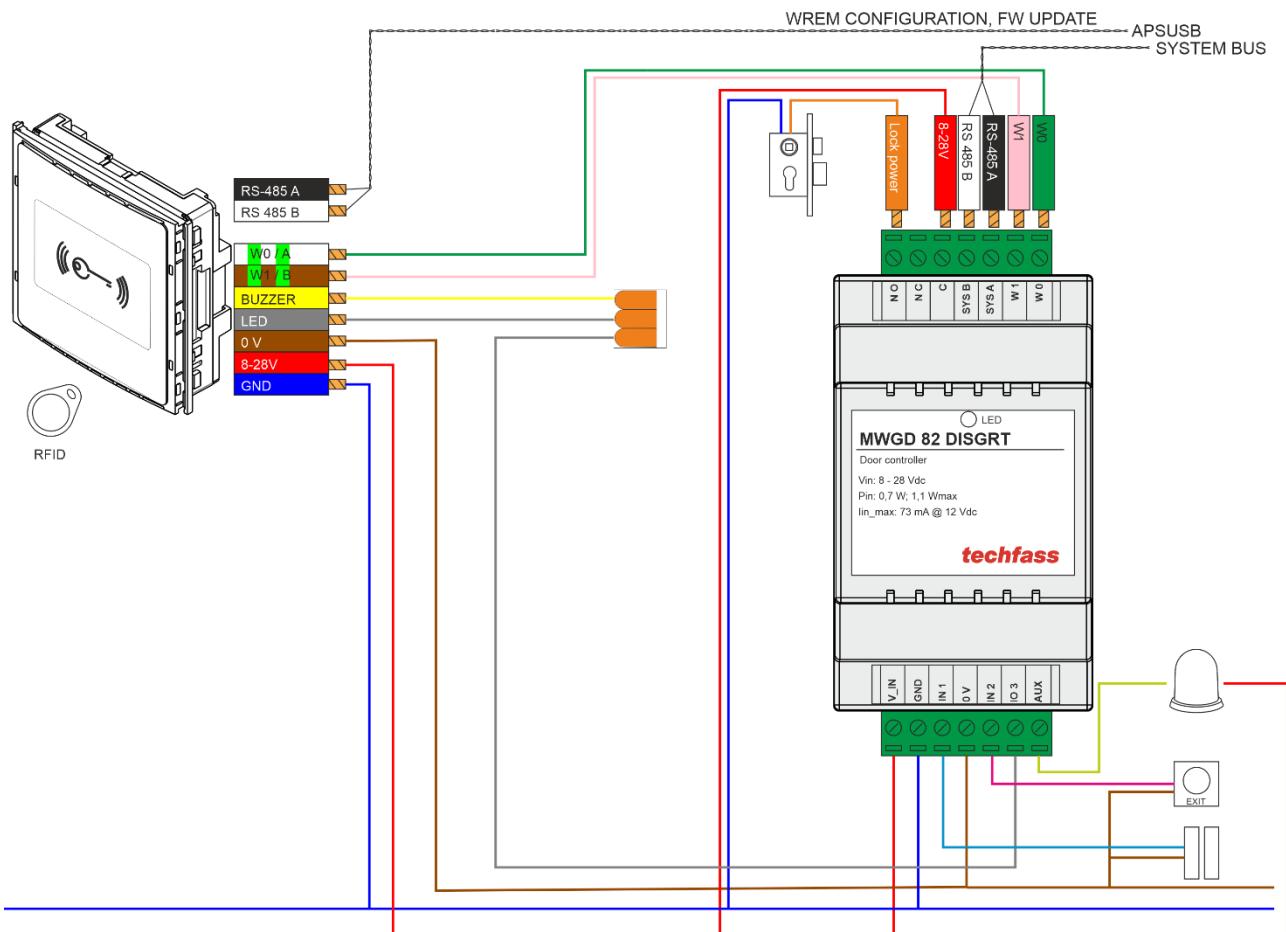

5 Settings

5.1 Setup procedure

If we would like to set the reader parameters, e.g. its RFID parameters or wiegand output, we must connect it to the computer and control software. Physical connection is possible using the device

via USB

APSUSB <https://www.techfass.com/cs/produkty/102/produkt/1216/apsusb>

via LAN

APSLAN <https://www.techfass.com/cs/produkty/102/produkt/94/apslan>

5.1.1 Software application

The desktop application for configuration and firmware update:

APS Reader <https://www.techfass.com/cs/produkty/101/produkt/389/aps-reader>

5.2 Indicative parts RGB LED and buzzer

PART	ACTION	DESCRIPTION
Red LED	Continuously lit	Power supply
Green LED	Flash	ID media reading, lock release (driven by signal IN2)
Yellow LED	Flash	According to the configuration
Buzzer	Buzzing	ID media reading, lock release (driven by signal IN1)

5.3 Configurable parameters

WREM 82 reader allows RFID read configuration, ID bit length and Wiegand output format settings.

5.3.1 125 kHz

Enable / Disable

- Standard em marin & TF ID
- Jablotron ID

*Default settings: all enabled.

ID Length

125 kHz	bits				
ID	24	32	40	44	56

* Default settings: 40 bits format.

Wiegand output format settings

125 kHz	bits				
Data	26	32	42	44	56

*Default settings: 42 bits format.

5.3.2 13,56 MHz

32 bit CSN	56 bit CSN	TF Mobile ID
Disable	Disable	Disable
32 data bits (MSB)	32 data bits (MSB)	32 data bits (MSB)
32 data bits, reversed (LSB)	32 data bits, reversed (LSB)	32 data bits, reversed (LSB)
24 data bits (MSB)	24 data bits (MSB)	24 data bits (MSB)
Facility code 0x01 + 16 data bits (MSB)	Facility code 0x01 + 16 data bits (MSB)	Facility code 0x01 + 16 data bits (MSB)
	56 data bits (MSB)	56 data bits (MSB)
	56 data bits, reversed (LSB)	56 data bits, reversed (LSB)

6 Other

6.1 Legislation

The product is compliant with following harmonized directives of European Union.

EU HARMONIZATION RULES, STANDARDS, REGULATIONS
2014/53/EU; "RED"
2014/30/EU; "EMCD"
2014/35/EU; "LVD"; ČSN EN 62368 – 1
2011/65/EU "RoHS"
(ES) č. 1907/2006 "REACH"

6.2 Declaration of conformity

 The manufacturer TECH FASS Ltd. declares, that the product follows legal requirements and fulfils necessary European directives. The declaration of conformity document can be downloaded from our web site:
<https://www.techfass.com/en/download/11/conformity-declaration>

6.3 Electrical waste



According to WEEE directive (2012/19/EU), this product cannot be disposed of as unsorted municipal domestic waste and has to be returned to recycling center after its lifetime is over.

techfass

TECH FASS s.r.o.

Věštínská 1611/19, Praha